



#### TO SET PROGRAM

1. Insert **ON (GREEN)** and **OFF (RED)** trippers into dial at desired **ON** and **OFF** times.
2. Turn dial clockwise one or more complete revolutions until the arrowhead is aligned with time-of-day (AM or PM) in window.



**CONTACT RATINGS: SPST**  
 20 AMP. "R" 120-277 VAC, 1800 W.  
 (15A) "T", 120 VAC, 1 H.P. - 120 VAC  
 2 HP - 240 VAC, 360 VA 120/240 VAC



LR3730

**CONTACT RATINGS: SPST**  
 16 AMP "R" 120-277 VAC, 1800 W.  
 (15A) "T" 120 VAC, 1 H.P. -120 VAC,  
 2 H.P. -240 VAC, 360 VA 120/240 VAC.

**MODEL NO: PB913N84**  
**CLOCK MOTOR VOLTAGE: 125V**

**INTERMATIC INCORPORATED**  
 SPRING GROVE, ILLINOIS 60081-9698  
 PRODUCT OF MEXICO