



### TO SET PROGRAM

1. Pull **UP** trippers on dial to set desired **ON** times.
2. Turn dial clockwise until the time of day is adjacent to **TIME** arrow.

**IN CASE OF POWER FAILURE RESET TIMER.**



**CONTACT RATINGS: SPST**  
 20 AMP. "R" 120-277 VAC, 1800 W.  
 (15A) "T", 120 VAC, 1 H.P. - 120 VAC  
 2 HP - 240 VAC, 360 VA 120/240 VAC



LR3730

**CONTACT RATINGS: SPST**  
 16 AMP "R" 120-277 VAC, 1800 W.  
 (15A) "T" 120 VAC, 1 H.P. -120 VAC,  
 2 H.P. -240 VAC, 360 VA 120/240 VAC.

**MODEL NO: PB914N**  
**CLOCK MOTOR VOLTAGE: 208-277V**

**INTERMATIC INCORPORATED**  
 SPRING GROVE, ILLINOIS 60081-9698  
 PRODUCT OF MEXICO