




# MAX-E-PRO<sup>®</sup>

## HIGH EFFICIENCY POOL AND SPA PUMP

### SERIES P6E, P6RA and P6EA

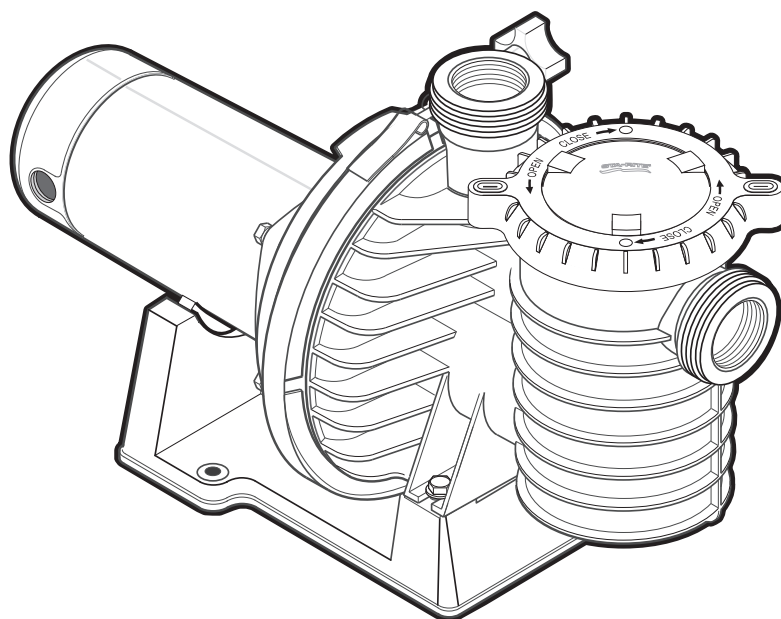

## INSTALLATION AND USER'S GUIDE

IMPORTANT SAFETY INSTRUCTIONS  
*READ AND FOLLOW ALL INSTRUCTIONS*  
SAVE THESE INSTRUCTIONS

## CUSTOMER SERVICE / TECHNICAL SUPPORT

If you have questions about ordering Pentair Aquatic Systems replacement parts, and pool products, please contact:

### Customer Service and Technical Support, USA

(8 A.M. to 4:30 P.M. — Eastern/Pacific Times)

Phone: (800) 831-7133

Fax: (800) 284-4151

### Web site

Visit [www.pentairpool.com](http://www.pentairpool.com) or [www.staritepool.com](http://www.staritepool.com) to find more information about Pentair products.

### Sanford, North Carolina (8 A.M. to 4:30 P.M. ET)

Phone: (919) 566-8000

Fax: (919) 566-8920

### Moorpark, California (8 A.M. to 4:30 P.M. PT)

Phone: (805) 553-5000 (Ext. 5591)

Fax: (805) 553-5515

## TABLE OF CONTENTS

<b>Important Pump Warning and Safety Instructions</b> .....	<b>ii</b>	<b>Maintenance</b> .....	<b>6</b>
<b>Installation</b> .....	<b>1</b>	Cleaning the Strainer Basket	6
Location	1	Pump Disassembly/Removing Old Seal	6
Piping	1	Pump Reassembly/Installing New Seal	7
Thread Taping Instructions	1	<b>Troubleshooting</b> .....	<b>8</b>
Fittings	1	<b>Replacement Parts</b> .....	<b>9</b>
Suction Requirements	2	Exploded Parts View (P6E, P6EA and P6RA Models)	9
Suction Outlet Covers	2	Parts List (P6E, P6EA and P6RA Models)	9
Testing and Certification	2	Exploded Parts View (P6EA6D36-204 and P6EA6E36-205)	10
Water Velocity	2	Parts List (P6EA6D36-204 and P6EA6E36-205)	10
Electrical Installation	3	Motor/Impeller/Diffuser Table	11
Wiring	3		
Grounding	3		
Bonding	3		
Wiring Two-Speed Motor	4		
<b>Operation</b> .....	<b>4</b>		
Pressure Test	4		
Priming the Pump	4		
Draining Pump	4		
Winterizing	5		
Start-up for Winterized Equipment	5		

## Max-E-Pro Pump Models

Hp	Energy Efficient Full-Rate	Energy Efficient Up-Rate	Standard Full-Rate	Standard Up-Rate	2-Speed	3 Phase 208-230/460v	3 Phase 575v	3 Phase 200/400V
1/2	P6E6C-204L	/	/	/	/	/	/	/
3/4	P6E6D-205L	/	P6R6D-205L	/	/	/	P6EA6D36-204	P6R62D3-186
1	P6E6E-206L	P6EA6E-205L	P6R6E-206L	P6RA6E-205L	/	345076	P6EA6E36-205	P6R62E3-187
1-1/2	P6E6F-207L	P6EA6F-206L	P6R6F-207L	P6RA6F-206L	P6RA6YF-206L	345077	/	P6R62F3-188
1-3/4	/	P6EAA6F-216L	/	P6RAA6F-216L	/	/	/	/
2	P6E6G-208L	P6EA6G-207L	P6R6G-208L	P6RA6G-207L	P6RA6YG-207L	345078	P6EA6G36-207	P6R62G3-189
2-1/2	/	/	/	P6RAA6G-208L	P6EAA6G-208L	/	/	/
3	P6E6H-209L	/	P6R6H-209L	/	/	345079	P6E6H36-209	/

# IMPORTANT PUMP WARNING AND SAFETY INSTRUCTIONS



## IMPORTANT NOTICE

This guide provides installation and operation instructions for this pump. Consult Pentair with any questions regarding this equipment.

**Attention Installer:** This guide contains important information about the installation, operation and safe use of this product. This information should be given to the owner and/or operator of this equipment after installation or left on or near the pump.

**Attention User:** This manual contains important information that will help you in operating and maintaining this product. Please retain it for future reference.

## READ AND FOLLOW ALL INSTRUCTIONS SAVE THESE INSTRUCTIONS



This is the safety alert symbol. When you see this symbol on your system or in this manual, look for one of the following signal words and be alert to the potential for personal injury.

### **⚠ DANGER**

Warns about hazards that can cause death, serious personal injury, or major property damage if ignored.

### **⚠ WARNING**

Warns about hazards that may cause death, serious personal injury, or major property damage if ignored.

### **⚠ CAUTION**

Warns about hazards that may or can cause minor personal injury or property damage if ignored.

### **NOTE**

Indicates special instructions not related to hazards.

Carefully read and follow all safety instructions in this manual and on equipment. Keep safety labels in good condition; replace if missing or damaged.

When installing and using this electrical equipment, basic safety precautions should always be followed, include the following:

### **⚠ WARNING**

Do not permit children to use this product.

### **⚠ WARNING**

**RISK OF ELECTRICAL SHOCK.** Connect only to a branch circuit protected by a ground-fault circuit-interrupter (GFCI). Contact a qualified electrician if you cannot verify that the circuit is protected by a GFCI.

### **⚠ WARNING**

This unit must be connected only to a supply circuit that is protected by a ground-fault circuit-interrupter (GFCI). Such a GFCI should be provided by the installer and should be tested on a routine basis. To test the GFCI, push the test button. The GFCI should interrupt power. Push the reset button. Power should be restored. If the GFCI fails to operate in this manner, the GFCI is defective. If the GFCI interrupts power to the pump without the test button being pushed, a ground current is flowing, indicating the possibility of an electric shock. Do not use this pump. Disconnect the pump and have the problem corrected by a qualified service representative before using.

### **⚠ CAUTION**

This pump is for use with permanent swimming pools and may also be used with hot tubs and spas if so marked. Do not use with storable pools. A permanently-installed pool is constructed in or on the ground or in a building such that it cannot be readily disassembled for storage. A storable pool is constructed so that it is capable of being readily disassembled for storage and reassembled to its original integrity.

## General Warnings

- Never open the inside of the drive motor enclosure. There is a capacitor bank that holds a 230 VAC charge even when there is no power to the unit.
- The pump is not submersible.
- The pump is capable of high flow rates; use caution when installing and programming to limit pumps performance potential with old or questionable equipment.
- Code requirements for electrical connection differ from country to country, state to state, as well as local municipalities. Install equipment in accordance with the National Electrical Code and all applicable local codes and ordinances.
- Before servicing the pump; switch OFF power to the pump by disconnecting the main circuit to the pump.
- This appliance is not intended for use by persons (including children) of reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

### **⚠ DANGER**

FAILURE TO FOLLOW ALL INSTRUCTIONS AND WARNINGS CAN RESULT IN SERIOUS BODILY INJURY OR DEATH. **THIS PUMP SHOULD BE INSTALLED AND SERVICED ONLY BY A QUALIFIED POOL SERVICE PROFESSIONAL. INSTALLERS, POOL OPERATORS AND OWNERS MUST READ THESE WARNINGS AND ALL INSTRUCTIONS IN THE OWNER'S MANUAL BEFORE USING THIS PUMP. THESE WARNINGS AND THE OWNER'S MANUAL MUST BE LEFT WITH THE POOL OWNER.**

### **⚠ DANGER**

SUCTION ENTRAPMENT HAZARD: STAY OFF THE MAIN DRAIN AND AWAY FROM ALL SUCTION OUTLETS!



THIS PUMP PRODUCES HIGH LEVELS OF SUCTION AND CREATES A STRONG VACUUM AT THE MAIN DRAIN AT THE BOTTOM OF THE BODY OF WATER. THIS SUCTION IS SO STRONG THAT IT CAN TRAP ADULTS OR CHILDREN UNDER WATER IF THEY COME IN CLOSE PROXIMITY TO A DRAIN OR A LOOSE OR BROKEN DRAIN COVER OR GRATE.

THE USE OF UNAPPROVED COVERS OR ALLOWING USE OF THE POOL OR SPA WHEN COVERS ARE MISSING, CRACKED OR BROKEN CAN RESULT IN BODY OR LIMB ENTRAPMENT, HAIR ENTANGLEMENT, BODY ENTRAPMENT, EVISCERATION AND/OR DEATH.

The suction at a drain or outlet can cause:

**Limb Entrapment:** When a limb is sucked or inserted into an opening resulting in a mechanical bind or swelling. This hazard is present when a drain cover is missing, broken, loose, cracked or not properly secured.

**Hair Entanglement:** When the hair tangles or knots in the drain cover, trapping the swimmer underwater. This hazard is present when the flow rating of the cover is too small for the pump or pumps.

**Body Entrapment:** When a portion of the body is held against the drain cover trapping the swimmer underwater. This hazard is present when the drain cover is missing, broken or the cover flow rating is not high enough for the pump or pumps.

**Evisceration/Disembowelment:** When a person sits on an open pool (particularly a child wading pool) or spa outlet and suction is applied directly to the intestines, causing severe intestinal damage. This hazard is present when the drain cover is missing, loose, cracked, or not properly secured.

# IMPORTANT PUMP WARNING AND SAFETY INSTRUCTIONS

**Mechanical Entrapment:** When jewelry, swimsuit, hair decorations, finger, toe or knuckle is caught in an opening of an outlet or drain cover. This hazard is present when the drain cover is missing, broken, loose, cracked, or not properly secured.

**NOTE: ALL SUCTION PLUMBING MUST BE INSTALLED IN ACCORDANCE WITH THE LATEST NATIONAL AND LOCAL CODES, STANDARDS AND GUIDELINES.**

**⚠ WARNING** TO MINIMIZE THE RISK OF INJURY DUE TO SUCTION ENTRAPMENT HAZARD:

- A properly installed and secured ANSI/ASME A112.19.8 approved anti-entrapment suction cover must be used for each drain.
- Each suction cover must be installed at least three (3') feet apart, as measured from the nearest point to nearest point.
- Regularly inspect all covers for cracks, damage and advanced weathering.
- If a cover becomes loose, cracked, damaged, broken or is missing, replace with an appropriate certified cover.
- Replace drain covers as necessary. Drain covers deteriorate over time due to exposure to sunlight and weather.
- Avoid getting hair, limbs or body in close proximity to any suction cover, pool drain or outlet.
- Disable suction outlets or reconfigure into return inlets.

**⚠ WARNING** A clearly labeled emergency shut-off switch for the pump must be in an easily accessible, obvious place. Make sure users know where it is and how to use it in case of emergency.

**The Virginia Graeme Baker (VGB) Pool and Spa Safety Act** creates new requirements for owners and operators of commercial swimming pools and spas.

Commercial pools or spas constructed on or after December 19, 2008, shall utilize:

(A) A multiple main drain system without isolation capability with suction outlet covers that meet ASME/ANSI A112.19.8a Suction Fittings for Use in Swimming Pools, Wading Pools, Spas, and Hot Tubs and either:

- (i) A safety vacuum release system (SVRS) meeting ASME/ANSI A112.19.17 Manufactured Safety Vacuum Release systems (SVRS) for Residential and Commercial Swimming Pool, Spa, Hot Tub, and Wading Pool Suction Systems and/or ASTM F2387 Standard Specification for Manufactured Safety Vacuum Release Systems (SVRS) for Swimming pools, Spas and Hot Tubs or
- (ii) A properly designed and tested suction-limiting vent system or
- (iii) An automatic pump shut-off system.

Commercial pools and spas constructed prior to December 19, 2008, with a single submerged suction outlet shall use a suction outlet cover that meets ASME/ANSI A112.19.8a and either:

- (A) A SVRS meeting ASME/ANSI A112.19.17 and/or ASTM F2387, or
- (B) A properly designed and tested suction-limiting vent system, or
- (C) An automatic pump shut-off system, or
- (D) Disabled submerged outlets, or
- (E) Suction outlets shall be reconfigured into return inlets.

**For Installation of Electrical Controls at Equipment Pad (ON/OFF Switches, Timers and Automation Load Center)**

**⚠ CAUTION** Install all electrical controls at equipment pad, such as on/off switches, timers, and control systems, etc. to allow the operation (startup, shut-down, or servicing) of any pump or filter so the user does not place any portion of his/her body over or near the pump strainer lid, filter lid or valve closures. This installation should allow the user enough space to stand clear of the filter and pump during system start-up, shut down or servicing of the system filter.



**⚠ DANGER**

**HAZARDOUS PRESSURE: STAND CLEAR OF PUMP AND FILTER DURING START UP**



Circulation systems operate under high pressure. When any part of the circulating system (i.e. locking ring, pump, filter, valves, etc.) is serviced, air can enter the system and become pressurized.

Pressurized air can cause the pump housing cover, filter lid, and valves to violently separate which can result in severe personal injury or death. Filter tank lid and strainer cover must be properly secured to prevent violent separation. Stand clear of all circulation system equipment when turning on or starting up pump.

Before servicing equipment, make note of the filter pressure. Be sure that all controls are set to ensure the system cannot inadvertently start during service. Turn off all power to the pump. **IMPORTANT: Place filter manual air relief valve in the open position and wait for all pressure in the system to be relieved.**

Before starting the system, fully open the manual air relief valve and place all system valves in the "open" position to allow water to flow freely from the tank and back to the tank. Stand clear of all equipment and start the pump.

**IMPORTANT: Do not close filter manual air relief valve until all pressure has been discharged from the valve and a steady stream of water appears.** Observe filter pressure gauge and be sure it is not higher than the pre-service condition.

## General Installation Information

- All work must be performed by a qualified service professional, and must conform to all national, state, and local codes.
- Install to provide drainage of compartment for electrical components.
- These instructions contain information for a variety of pump models and therefore some instructions may not apply to a specific model. All models are intended for use in swimming pool applications. The pump will function correctly only if it is properly sized to the specific application and properly installed.

**⚠ WARNING**

Pumps improperly sized or installed or used in applications other than for which the pump was intended can result in severe personal injury or death. These risks may include but not be limited to electric shock, fire, flooding, suction entrapment or severe injury or property damage caused by a structural failure of the pump or other system component.

**⚠ WARNING**

The pump can produce high levels of suction within the suction side of the plumbing system. These high levels of suction can pose a risk if a person comes within the close proximity of the suction openings. A person can be seriously injured by this high level of vacuum or may become trapped and drown. It is absolutely critical that the suction plumbing be installed in accordance with the latest national and local codes for swimming pools.

Warnings and safety instructions for Pentair Aquatic Systems pumps and other related products are available at:

<http://www.pentairpool.com/pool-owner/safety-warnings/> or call (800) 831-7133 for additional free copies of these instructions.

Please refer to <http://www.pentairpool.com/pool-owner/safety-warnings/> for warning and safety instructions related to the this product.

## SAVE THESE INSTRUCTIONS

# INSTALLATION

## ⚠ WARNING

Trapped air in the system can cause permanent equipment damage. Ensure all air is relieved from the system before operating, testing or servicing the equipment.

## ⚠ CAUTION

Do NOT connect system to a high pressure or city water system.

## Location

Only qualified, licensed personnel should install the pump and pump wiring.


Be sure the Dyna-Pro® Self-Priming Pool/Spa Pump equipment pad or plumbing meets the following requirements:

- Pump mount must be solid, level, rigid and minimize vibration. To reduce vibration and stress to piping, bolt the pump to the equipment pad.
- Allow for enough ventilation to maintain air temperature at less than the maximum ambient temperature rating listed on the motor nameplate.
- If installed in an enclosure/pump house, the enclosure must have adequate ventilation and air circulation to keep the temperature inside the enclosure at or below the maximum rated ambient temperature when the pump is running.
- Locate away from corrosive or flammable liquids.
- Suction port should be as close to water level as possible.
- To reduce friction losses use short, straight suction pipe.
- Allow for gate valves in both the suction and discharge piping.
- Provide adequate floor drainage to prevent flooding and protect the pump from excess moisture.
- Allow adequate access for servicing pump and piping.

### Port Threads:

Internal - 2" NPT for direct connection to pipe. External - 3-1/4" Buttress. Fits P/N U11-200P Union Collar for quick disconnect.

See parts list on page 9 or 10 for Union Kit part numbers.

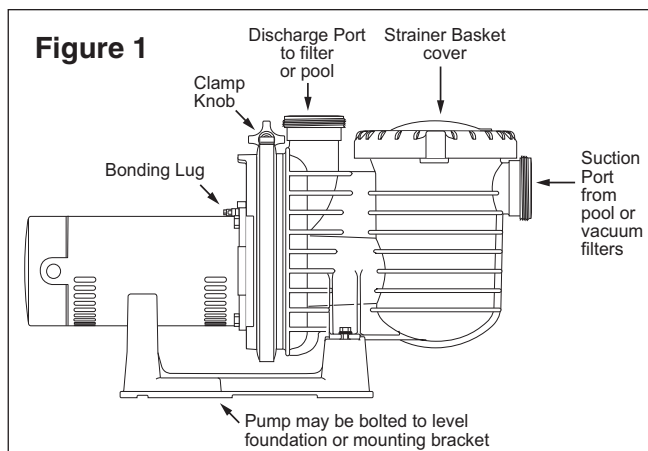

## Piping

1. Use at least 2" (51mm) pipe. Increase size if a long run is needed.
2. Support both the suction and discharge piping independently, placing these supports as close to the pump as possible. This will prevent unnecessary strain on the pump.
3. During piping installation, start all piping and run the pipe away from the pump. This will prevent strain caused by a gap at the last connection.
4. Slope suction pipe slightly upward toward the pump to prevent airlocking.
5. To prevent flooding when removing the pump for service, all flooded suction systems must have a gate valve in both the suction and discharge pipes.
6. For most installations Pentair recommends installing a valve on both the pump suction and return lines so that the pump can be isolated during routine maintenance. However, we also recommend a valve, elbow or tee installed in the suction line should be no closer to the front of the pump than five (5) times the suction line diameter.

**Example:** A 2 inch pipe requires a 10 inch (25.4 cm) straight run in front of the suction inlet of the pump. This will help the pump prime faster and last longer.

**Note:** Do not install 90° elbows directly into the pump inlet or outlet.

## Taping Instructions

1. If connecting threaded pipe directly to the pump, apply one or two layers of thread seal tape to the male pipe threads. Cover the entire threaded portion of the pipe.

**Note:** Do NOT use pipe dope; pipe dope can lead to cracking in some plastics and may damage components in the piping system.

2. If plumbing threaded pipe to the pump using unions, apply thread seal tape between the pipe and union adapter. The union collar should be installed hand-tight. Be sure the union's O-ring is seated correctly in its groove.

**Note:** DO NOT overtighten or tighten past the thread stops within the pump ports.

If leaks occur, remove pipe, clean off old tape, rewrap with one or two layers of new tape and reinstall the piping.

## Fittings

1. Fittings restrict flow. Use the fewest number of fittings possible to maximize system efficiency.
2. Avoid fittings that could lead to air traps in suction piping.
3. Pool and spa drains must conform to International Association of Plumbing and Mechanical Officials (IAPMO) standards.
4. Use only non-entrapping suction fittings and dual suction outlets.

## Pump Suction Requirements

The pump suction system must provide protection against the hazard of suction entrapment or hair entrapment/entanglement.



### WARNING

Pump suction is hazardous and can trap and drown or disembowel bathers. Do not use or operate swimming pools, spas, or hot tubs if a suction outlet cover is missing, broken, or loose. Follow the guidelines below for a pump installation which minimizes risk to users of pools, spas, and hot tubs.

### Suction Outlet Covers

All suction outlet covers must be properly maintained. They must be replaced if cracked, broken or missing. All suction outlets must have correctly installed, screw-fastened covers in place.

Provide at least two hydraulically balanced main drains, with covers, as suction outlets for each circulating pump suction line. The centers of the main drains (suction outlets) on any one suction line must be at least three feet apart.

The system must be built so that it cannot operate with the pump drawing water from only one main drain (that is, there must be at least two main drains connected to the pump whenever it is running – see **Figure 2**). However, if two main drains run into a single suction line, the single suction line may be equipped with a valve which will shut off both main drains from the pump (see **Figure 2**). More than one pump can be connected to a single suction line as long as the requirements above are met.


### Testing and Certification

Suction outlet covers must have been tested by a nationally recognized testing laboratory and found to comply with the latest ANSI/ASME Specifications for Suction Fittings For Use in Swimming Pools, Spas, Hot Tubs, and Whirlpool Bathtub Applications.

### Water Velocity

The maximum water velocity through the suction fitting or cover for any suction outlet must not exceed 1.5 feet per second unless the outlet complies with the latest ANSI/ASME Specification for Suction Fittings For Use in Swimming Pools, Spas, Hot Tubs, and Whirlpool Bathtub Applications. In any case, do not exceed the suction fitting's maximum designed flow rate.

If 100% of the pump's flow comes from the main drain system, the maximum water velocity in the pump suction hydraulic system must be six feet per second or less even if one main drain (suction outlet) is completely blocked. The flow through the remaining main drain(s) must comply with the latest ANSI/ASME Specification for Suction Fittings For Use in Swimming Pools, Spas, Hot Tubs, and Whirlpool Bathtub Applications.

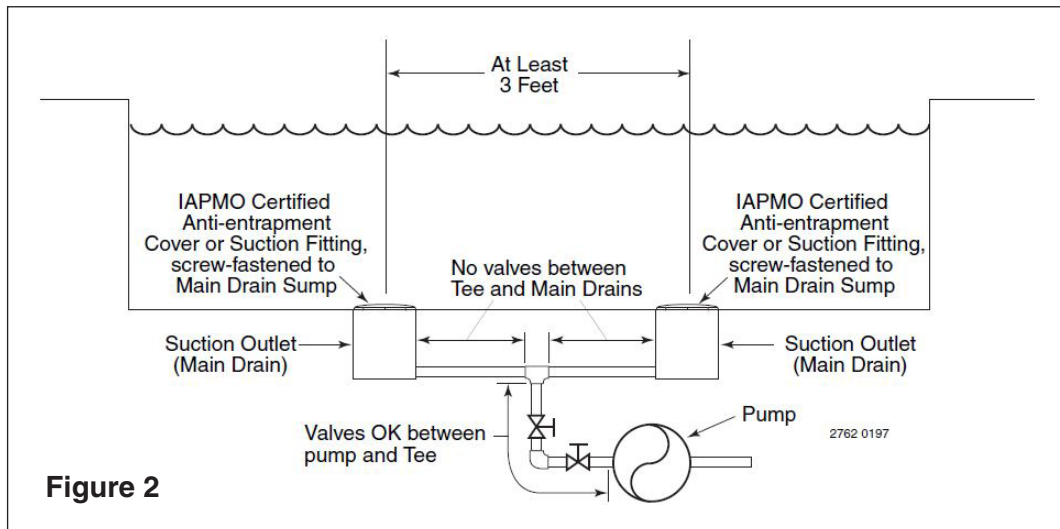

## Electrical Installation

### ⚠️ WARNING



**RISK OF ELECTRICAL SHOCK OR ELECTROCUTION.** This pump must be installed by a licensed or certified electrician or a qualified service professional in accordance with the National Electrical Code (NEC) and all other applicable national or local codes and ordinances. Improper installation will create an electrical hazard which could result in death or serious injury to users, installers, or others due to electrical shock, and may also cause damage to property.

**Always disconnect power to the pump at the circuit breaker before servicing the pump. Failure to do so could result in death or serious injury to service people, users or others due to electric shock.**

Read all servicing instructions before working on the pump.

## Wiring

1. Be sure all electrical breakers, switches and automatic controls are turned off before wiring motor.

### ⚠️ WARNING

**STORED CHARGE** - Wait at least sixty (60) seconds before servicing.

2. Become familiar with the wiring diagram, volts, hertz, amps and phase of your particular pump motor. All of this information is provided on the motor nameplate label found on the side of the motor.
3. Be sure that the supply voltage meets the requirements listed on the motor nameplate. If these requirements are not met, permanent motor damage may occur.
4. For wiring sizes and general guidelines for proper electrical installation, please follow the specifications defined in the National Electrical Code and all other applicable national or local codes.
5. 3-Phase motors require external overload protection. An initial inspection is needed to ensure proper rotation of the pump. Once installed, momentarily cycle the power on and then off. Note the rotation of the motor fan or shaft as it comes to a stop. If wired correctly the motor shaft and/or fan will match the rotation arrow noted on the pump.
6. Use a strain relief and be sure all electrical connections are clean and tight.
7. Cut the wires to the appropriate length so they do not overlap or touch when connected.

## Grounding

1. Permanently ground the motor using the green ground screw, as shown below. Use the correct wire size and type specified by National Electrical Code. Be sure the ground wire is connected to an electrical service ground.
2. The pump should be permanently connected to either a circuit breaker, 2-pole timer or 2-pole relay.

**Note:** If AC power is supplied by a GFCI circuit breaker, the pump should be wired on its own independent circuit **unless the pump is operated in tandem with a Pentair salt chlorine generator.**

## Bonding

1. Bond the motor to the structure in accordance with the National Electrical Code and all other applicable national or local codes. Use a solid copper bonding conductor not smaller than 8 AWG. For Canadian installations, a 6 AWG or larger solid copper bonding conductor is required. Run a wire from the external bonding screw or lug to the bonding structure.


2. Connect the wire from the accessible bonding lug on the motor to all metal parts of the swimming pool, spa, or hot tub structure and to all electrical equipment, metal conduit, and metal piping within 5 feet (1.52 meters) of the inside walls of the swimming pool, spa, or hot tub. Run a wire from the external bonding screw or lug to the bonding structure.

### ⚠️ WARNING

Before establishing or restoring power to the pump, be sure all electrical connections are tight and all electrical and wiring compartment covers are properly installed.

**Note:** When the pump is started and stopped by removing power with a relay or timer, a two-pole device should be used to apply and remove power to both POWER LINE TERMINALS.

*Pentair offers GFCI breakers which offer appropriate personal protection while meeting 2008 to current NEC Standards for Pool Pumps. See Pentair product catalog for details.*

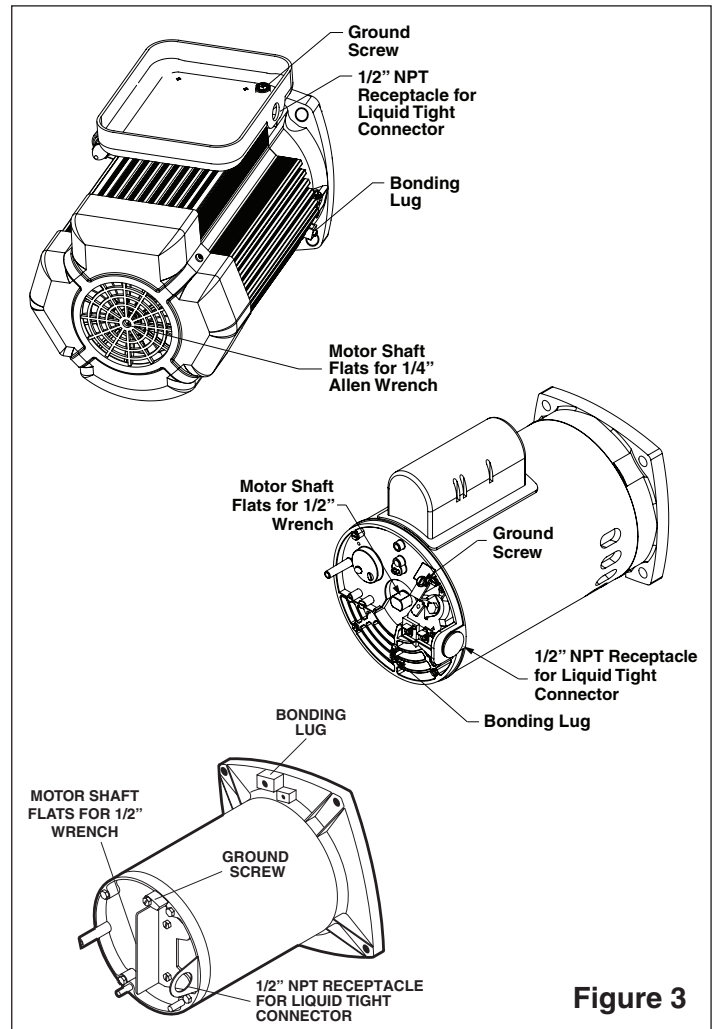

**Figure 3**

# OPERATION

## ⚠ CAUTION

DO NOT run the pump dry. If the pump is run dry, the mechanical seal will be damaged and the pump will start leaking. If this occurs, the damaged seal must be replaced. ALWAYS maintain proper water level. If the water level falls below the suction port, the pump will draw air through the suction port, losing the prime and causing the pump to run dry, resulting in a damaged seal. Continued operation in this manner could cause a loss of pressure, resulting in damage to the pump case, impeller and seal and may cause property damage.

## Pressure Test

Before performing pressure tests on the system, make the following safety checks:

1. Be sure all clamps, bolts, lids and system accessories are properly and tightly installed.
2. Release all pressure in the system.
3. Water pressure during test must not exceed 25 PSI (7.5 kg/cm<sup>2</sup>).
4. Water temperature during test must not exceed 100°F (38°C).
5. Limit pressure test to 24 hours. After test, visually inspect the system to ensure it is ready for operation.

## Priming the Pump

### ⚠ WARNING

DO NOT open the strainer pot if pump fails to prime or if pump has been operating without water in the strainer pot. Pumps operated in these circumstances may experience a build up of vapor pressure and may contain scalding hot water. Opening the pump may cause serious personal injury. In order to avoid the possibility of personal injury, make sure the suction and discharge valves are open and strainer pot temperature is cool to touch, then open with extreme caution.

1. Relieve all air from filter and piping system. See the filter owner's manual for correct procedure.
2. In a flooded suction system (water source higher than the pump), the pump will prime itself when suction and discharge valves are opened.
3. If pump is not in a flooded suction system, unscrew and remove strainer cover; fill strainer and pump with water.
4. Clean and inspect O-Ring; reinstall on strainer groove.

**Note:** Do not lubricate the strainer lid O-Ring. The original equipment O-Ring contains a permanent internal lubricant.

**Note:** If you replace the O-Ring with a non-internally lubricated O-Ring, you may need to apply a silicone based lubricant.

5. Replace strainer lid, turning clockwise to tighten the cover. Hand tighten only.
6. Pump should now prime. Priming time will depend on vertical length of suction lift and horizontal length of suction piping.

**Note:** If pump does not prime, make sure that all valves are open, suction pipe end is under water, and that there are no leaks in suction pipe. See *Troubleshooting*, page 8.

## Draining the Pump

### ⚠ WARNING

**SEPARATION HAZARD!** Purging the system with compressed air can cause components to separate, with risk of severe injury or death to anyone nearby. Use only a low pressure (below 5 PSI), high volume blower when air purging the pump, filter, or piping.

1. Pump down the pool, spa or hot tub water level below all inlets.

### ⚠ WARNING

**HAZARDOUS VOLTAGE!** To avoid dangerous or fatal electrical shock hazard, turn OFF power to the motor at the circuit breaker before draining the pump.

2. Remove strainer lid (turn counterclockwise). If necessary, tap handles gently with a rubber mallet. Low pressure air can be used to remove remaining water from the piping.
 

**Note:** Lugs have been provided on the trap lid to use a lever or pry bar for loosening.
3. Cap inlet piping after draining to keep water out of the pipes.
4. To prevent pump from freezing, remove strainer lid and drain the pump through the drain plugs provided.
  - Gravity drain system as far as possible.
  - Protect areas which retain water with non-toxic propylene glycol antifreeze ("RV" antifreeze).
5. Clean pump and strainer basket thoroughly; replace strainer lid.
6. Be sure motor is kept dry and covered.



## Winterizing

**CAUTION**

Allowing the pump to freeze will damage pump and void warranty.

**CAUTION**

Do not use anti-freeze solutions (except propylene glycol) in your pool/spa system. Propylene glycol, "RV antifreeze", is non-toxic and will not damage plastic system components; other anti-freezes are highly toxic and may damage plastic components in the system.

1. Drain all water from pump and piping when expecting freezing temperatures or when storing pump for a long time (see instructions below).
2. Keep motor dry and covered during storage.
3. To avoid condensation/corrosion problems, do not cover pump with plastic.

**For outdoor/unprotected installations:**

1. Gravity drain system as far as possible.
2. Protect areas which retain water with non-toxic propylene glycol antifreeze ("RV antifreeze").
3. Enclose entire system in a weatherproof enclosure.
4. To avoid condensation/corrosion damage, allow ventilation; do not wrap system in plastic.
5. Use a 40% propylene glycol/60% water solution to protect pump to -50°F (-46°C).

## Start-up for Winterized Equipment

1. Remove any temporary weather protection placed around system for shutdown.
2. Follow filter manufacturer's instructions for reactivation of the filter.
3. Inspect all electrical wiring for damage or deterioration over the shutdown period. Have a qualified serviceman repair wiring as needed.
4. Inspect and tighten all watertight connections.
5. Open all valves in suction and return piping.
6. Remove any winterizing plugs in piping system.
7. Drain all antifreeze from system.
8. Close all drain valves and replace all drain plugs in piping system.
9. Prime pump according to *Priming the Pump* on page 4.

# MAINTENANCE

## ⚠ WARNING



This pool pump must be installed by a licensed or certified electrician or a qualified pool serviceman in accordance with the National Electrical Code and all applicable local codes and ordinances. Improper installation will create an electrical hazard which could result in death or serious injury to pool users, installers, or others due to electrical shock, and may also cause damage to property.

**Always disconnect power to the pool pump at the circuit breaker before servicing the pump. Failure to do so could result in death or serious injury to serviceman, pool users or others due to electric shock.**

Read all servicing instructions before working on the pump.

## Cleaning the Strainer Basket

The only routine maintenance needed is inspection/cleaning of the strainer basket. Debris or trash that collects in the basket will choke off water flow through the pump. Follow the instructions below to clean the strainer basket:

1. Disconnect power to the pump at the circuit breaker.
2. Close all gate valves in the suction and discharge lines.
3. Release all pressure from the pump and piping system.
4. Remove strainer lid (turn counter-clockwise). If necessary, tap handles gently with a rubber mallet.
5. Remove the strainer basket and clean. Be sure all holes in basket are clear.
6. Flush basket with water and place back into the strainer pot.

**Note:** Ensure the large opening in the basket is oriented towards the pipe connection port (between ribs provided). If the basket is replaced backwards the lid will not fit on the strainer pot.


7. Clean and inspect the lid O-Ring and reinstall on strainer groove.
8. Clean the O-Ring groove on the strainer pot and reinstall the lid/locking ring.

**Note:** To prevent sticking, hand tighten only.

9. Prime the pump (see *Priming the Pump*, page 4).

## Pump Disassembly / Removing Old Seal

1. Disconnect power to the pump at the circuit breaker.
2. Close all gate valves in the suction and discharge lines.
3. Release all pressure from the pump and piping system.
4. Drain the pump by removing the drain plugs at the bottom of the strainer pot.
5. Remove the band clamp that holds the pump halves together. The motor and seal plate assembly can now be pulled away from pump body.
6. Remove the five (5) screws and washers securing the diffuser to the seal plate. Remove the diffuser.
7. Carefully remove the motor canopy, being sure not to touch the capacitor terminals. Loosen the capacitor clamp and move it to one side.
8. Hold the motor shaft with a 1/2" open-end wrench on the motor shaft flats.
9. Unscrew the impeller from the motor shaft (turning counterclockwise when facing the impeller).  
For models including a center impeller screw, remove the impeller screw (left-hand thread) and gasket before removing the impeller. Inspect the gasket for damage or cracks and replace if damaged.
10. Remove the rotating seal member from the motor shaft.
11. Remove the four (4) screws securing the seal plate to the motor.
12. Place seal plate face down on a flat surface and tap out white ceramic seal (see **Figure 4**).
13. Clean the seal plate's seal cavity and the motor shaft.

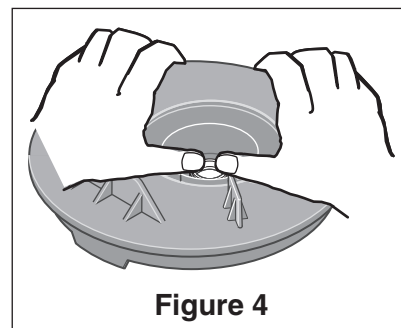

**Figure 4**

## Pump Reassembly / Installing New Seal

**IMPORTANT:** The ceramic seal of the pump's shaft seal must be clean and free of dirt, grease and dust before installing.

1. Wet the outer edge of the ceramic seal with a small amount of liquid detergent. Firmly and squarely press it into the seal plate cavity with your thumbs.
2. If ceramic seal does not seat properly into the seal plate cavity, remove it and place the seal face up on a flat surface. Reclean the seal plate cavity and attempt to reseat the seal.
3. If ceramic seal still will not seat correctly in the seal plate, place a cardboard washer over the ceramic seal and use a piece of 3/4" standard pipe to press the seal into place.

**Note:** Be sure not to scratch or mar the surface of the seal. If seal is damaged it will leak.

4. Remount the seal slate onto the motor using the four (4) motor to seal plate screws. Torque the screws to 60-80 inch-lbs. (69-92 kg/cm).
5. Apply a small amount of liquid detergent to the inside diameter of the rotating seal member.
6. Slide the rotating seal member, polished carbon face outwards, over the impeller sleeve until rubber drive ring hits the back of the impeller.
7. Screw the impeller onto the motor shaft clockwise. The impeller will correctly seat the rotating seal member into the seal plate.

For models including a center impeller screw, install the impeller gasket and lockscrew (left-hand thread). Torque the lock screw to 50-55 inch-lbs (57.6-63 kg/cm).

8. Mount the diffuser onto the seal plate with the five (5) screws and washers. Torque screws to 10-14 inch/lbs. (11.2-16.1 kg/cm).
9. Assemble the motor and seal plate to the pump body by reinstalling the band clamp.

**Note:** The clamp knob can be located in any position around the volute. If it is moved after assembly, tighten knob while tapping around clamp to assist sealing. **DO NOT** move the clamp while the pump is full of water.

10. Reinstall the drain plug into the bottom of the pump body.
11. Open all gate valves in the suction and discharge lines.
12. Reconnect power to the pump at the circuit breaker.
13. Prime the pump according to *Priming the Pump*, on page 4.

## TROUBLESHOOTING


Read and understand all safety and operating instruction in this manual before servicing the Dyna-Pro® Self-Priming Pool/Spa Pump.

Only qualified personnel should electrically test the pump motor.

Problem	Possible Cause	Corrective Action
Failure to Pump Water; Reduced Capacity or Discharge Pressure	Suction leaks / lost prime	<p>Ensure pump volute and strainer basket are full of water. See <i>Priming the Pump</i> on page 4.</p> <p>Inspect for leaks in the suction piping.</p> <p>Ensure suction pipe inlet is well below the water level to prevent pump from sucking air.</p> <p>Suction lift of 10 to 20 feet (3-6 M) will reduce performance. Suction lift of more than 20 feet (6 M) will prevent pumping and cause pump to lose prime. In either case, move pump closer (vertically) to water source. Make sure suction pipe is large enough.</p>
	Clogged pipe or impeller, or worn impeller/diffuser	<p>Ensure the strainer pot/basket is not clogged. If it is, clean the basket and pot.</p> <p>Ensure impeller is not clogged. Disassemble the pump according to <i>Pump Disassembly</i>, on page 6. If a blockage in the impeller is found clear the blockage and reassemble the pump according to <i>Pump Reassembly</i>, on page 7.</p> <p>Inspect the impeller and diffuser for wear. If either shows sign of damage or major wear order replacement parts listed in the <i>Parts List</i> (pages 9 or 10) or <i>Motor Chart</i> (page 11).</p> <p>Pump may be trying to push too high a column of water. If so, a “higher head” pump is needed.</p>
	Electrical issue	<p>Pump may be running too slowly. Check voltage at motor terminals and at the meter while pump is running. If low, see wiring instruction or consult power company.</p> <p>Inspect for loose electrical connections.</p> <p>Pump may be too hot.</p> <ol style="list-style-type: none"> <li>Check line voltage. If less than 90% or more than 110% of rated voltage, consult a licensed electrician.</li> <li>Increase ventilation to the pump.</li> <li>Reduce ambient temperature.</li> <li>Tighten any loose electrical connections.</li> </ol>
Mechanical Trouble and Noise	Suction and/or discharge piping are not properly supported	See <i>Piping</i> , on page 1 for plumbing installation requirements and recommendations.
	Pump is not properly mounted	Pump should be securely mounted to a concrete platform.

# REPLACEMENT PARTS

## Exploded Parts View (for P6E, P6EA and P6RA Models)

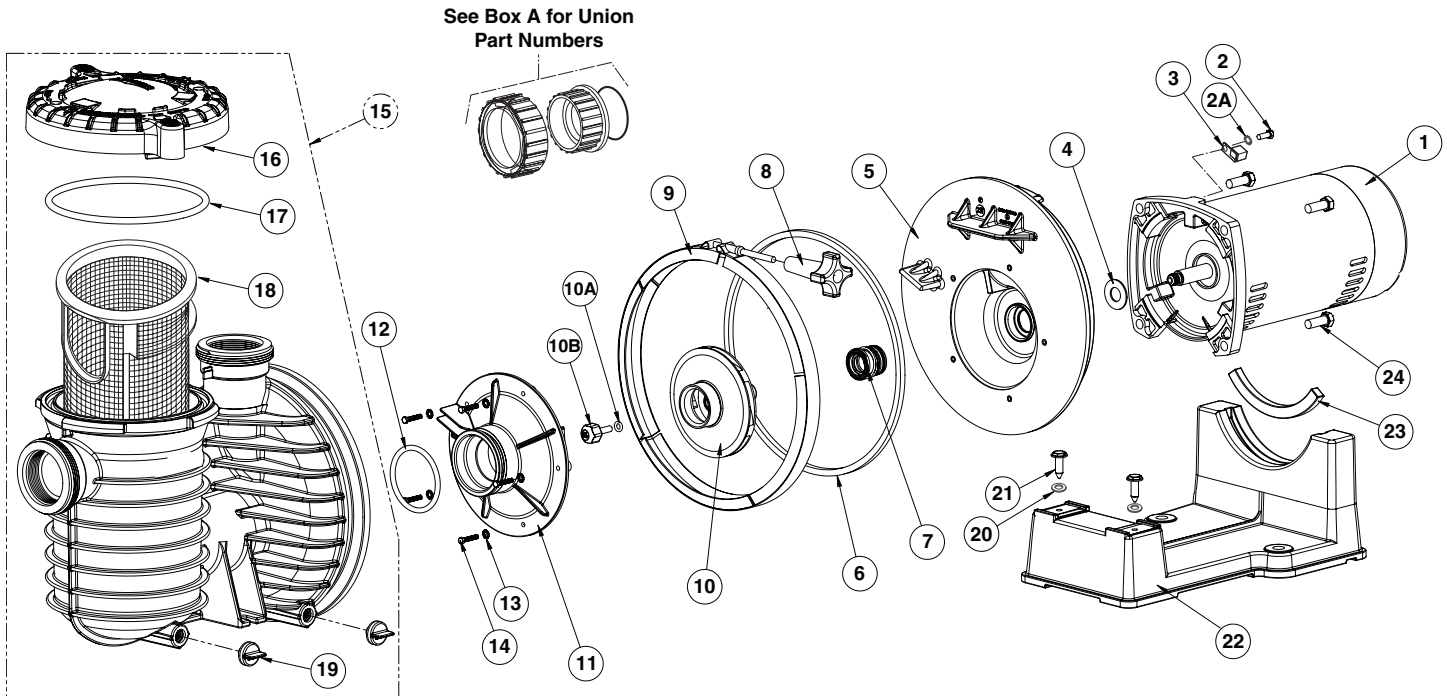

## Parts List (for P6E, P6EA and P6RA Models)

Item #	Part #	Part Description	Qty.
1	See Table on Page 11	Motor	1
2	U30-692SS	Screw, #10-32 x 1/2"	1
2A	U43-22SS	Lock Washer	1
3	U17-568	Bonding Lug	1
4	17351-0009	Water Slinger	1
5	C203-194P	Seal Plate Kit (Incl. Item# 6-7)	1
6	U9-228A	O-Ring (for pumps built before January 2015)	1
	357099	Gasket, Seal Plate to Housing (for pumps built in February 2015 or later)	
7	17351-0101S	Shaft Seal	1
8	C19037A	Band Clamp Knob	1
9	WC36-22	Band Clamp	1
10	See Table on Page 11	Impeller	1
10A	35505-1426	Impeller Screw O-Ring	1
10B	See Table on Page 11	Impeller Screw	1
11	See Table on Page 11	Diffuser	1
12	U9-374	Diffuser O-Ring	1
12	357098Z	Diffuser O-Ring (Blue Coating)	1
13	U43-21SS	Lock Washer, #8	5
14	U30-922SS	Screw (w/C1-271P Diffuser)	5
	U30-542SS	Screw (w/C1-271P1 Diffuser)	
15	17307-0110S	Trap Body Assembly (Incl. Item# 16-19)	1

Item #	Part #	Part Description	Qty.
16	17307-0111S	Trap Cover Assembly (Incl. Trap Cover and Item# 21)	1
17	35505-1440	Trap O-Ring	1
18	C8-58P	Basket	1
19	U178-920P	Drain Plug, 1/4" NPT	2
20	U43-41SS	Base Washer	2
21	U30-918SS	Base Screw	2
	C4-78P	Base	
22	C4-79P	Base (Model P6E6H only)	1
	C35-43	Motor Pad	
23	C35-44	Motor Pad (Model P6E6H only)	1
	U30-74SS	Screw, 3/8-16 x 1" Hex Head	
24	U30-74SS	Screw, 3/8-16 x 1" Hex Head	4
-	U27-153	Voltage Sticker - 115/230 Volts (Dual voltage model's only)	

(-) Note: Not shown


### Box A

For quick disconnect pipe connections, purchase separately:  
 Pkg. 188 2" Slip 1/2 Union Kit or  
 Pkg. 189 2" NPT 1/2 Union Kit.

#### Kit Includes:

U11-200P Union Collar  
 U9-362 O-Ring  
 U11-196P 2" Slip adapter OR  
 U11-199P 2" NPT adapter.

## Exploded Parts View (for Models P6EA6D36-204 and P6EA6E36-205)

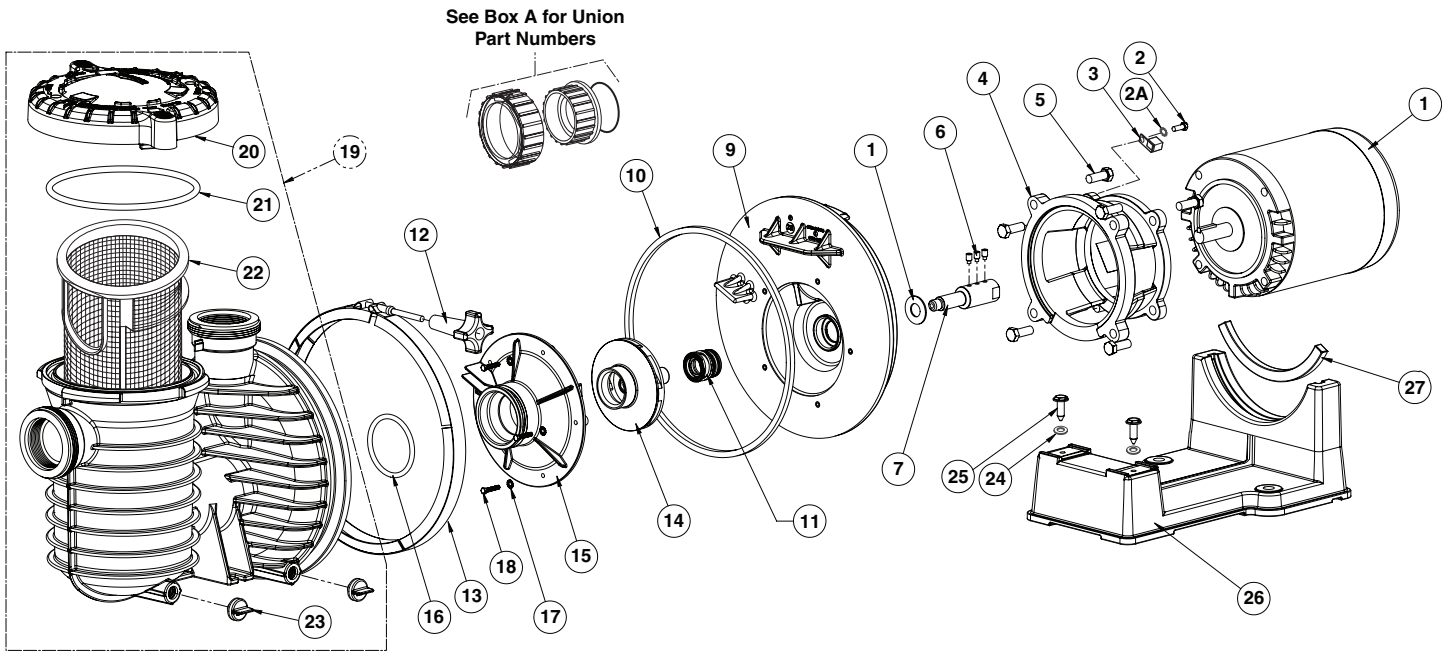

### Parts List (for Models P6EA6D36-204 and P6EA6E36-205)

Item #	Part #	Part Description	Qty.
1	See Table on Page 11	Motor	1
2	U30-692SS	Screw, #10-32 x 1/2"	1
2A	U43-22SS	Lock Washer	1
3	U17-568	Bonding Lug	1
4	C2-84	Pump Adapter	1
5	U30-74SS	Screw, 3/8-16 x 1" Hex Head	4
6	U30-754SS	Stub Shaft Pins	3
7	C10-41SS	Stub Shaft	1
8	17351-0009	Water Slinger	1
9	C203-194P	Seal Plate Kit (Incl. Item# 10-11)	1
10	U9-228A	O-Ring (for pumps built before January 2015)	1
	357099	Gasket, Seal Plate to Housing (for pumps built in February 2015 or later)	
11	17351-0101S	Shaft Seal	1
12	C19-37A	Band Clamp Knob	1
13	WC36-22	Band Clamp	1
14	See Table on Page 11	Impeller	1
	35505-1426	Impeller Screw O-Ring	
-	See Table on Page 11	Impeller Screw	1
15	C1-271P1	Diffuser	1
16	U9-374	Diffuser O-Ring	1
16	357098Z	Diffuser O-Ring (Blue Coating)	1
17	U43-21SS	Lock Washer, #8	5
18	U30-922SS	Screw (w/C1-271P Diffuser)	5
	U30-542SS	Screw (w/C1-271P1 Diffuser)	

Item #	Part #	Part Description	Qty.
19	17307-0110S	Trap Body Assembly (Incl. Item# 20-23)	1
20	17307-0111S	Trap Cover Assembly (Incl. Trap Cover and Item# 21)	1
21	35505-1440	Trap O-Ring	1
22	C8-58P	Basket	1
23	U178-920P	Drain Plug, 1/4" NPT	2
24	U43-41SS	Washer, Motor Base	2
25	U30-918SS	Screw, Motor Base	2
26	C4-78P	Motor Base	1
	C4-79P	Motor Base (Model P6E6H only)	
27	C35-43	Motor Pad	1
	C35-44	Motor Pad (Model P6E6H only)	

(-) **Note:** Not shown

### Box A

For quick disconnect pipe connections, purchase separately:  
 Pkg. 188 2" Slip 1/2 Union Kit or  
 Pkg. 189 2" NPT 1/2 Union Kit.

**Kit Includes:**

- U11-200PS Union Collar
- U9-362 O-Ring
- U11-196PS 2" Slip adapter OR
- U11-199P 2" NPT adapter.

## Motor/Impeller/Diffuser Table

1-PHASE 60Hz PUMPS				
Model	HP	Motor (Item #1)	Impeller (Item #10)	Diffuser (Item #11)
<b>115/230V 1-Speed</b>				
P6E6C-204L	1/2	AE100CHL	C105-238PX	C1-271P1
P6E6D-205L	3/4	AE100DHL	C105-238P	C1-271P1
P6R6D-205L	3/4	355021S	C105-238P	C1-271P1
P6E6E-206L	1	AE100EHL	C105-238PB	C1-271P1
P6EA6E-205L	1	AE100ELL	C105-238P	C1-271P1
P6RA6E-205L	1	A100ELL	C105-238P	C1-271P1
P6R6E-206L	1	355023S	C105-238PB	C1-271P1
P6EA6F-206L	1-1/2	AE100FLL	C105-238PB	C1-271P1
P6RA6F-206L	1-1/2	A100FLL	C105-238PB	C1-271P1
P6R6F-207L	1-1/2	355025S	C105-238PDBA	C1-271P1
<b>230V 1-Speed</b>				
P6E6F-207L*	1-1/2	AE100FHL	C105-238PDBA	C1-271P1
P6EAA6F-216L*	1-3/4	AE100F5LL	C105-238PDCA	C1-271P1
P6RAA6F-216L*	1-3/4	--	C105-238PDCA	C1-271P1
P6E6G-208L*	2	AE100GHL	C105-238PEBA	C1-271PA
P6EA6G-207L*	2	AE100GLL	C105-238PDBA	C1-271PA
P6RA6G-207L*	2	AE100GHL	C105-238PDBA	C1-271PA
P6R6G-208L	2	355027S	C105-238PEBA	C1-271P1
P6EAA6G-208L*	2-1/2	AE100G5LL	C105-238PEBA	C1-271P1
P6E6H-209L*	3	AE100HLL	C105-238PLA	C1-271PA
P6R6H-209L	3	355034S	C105-238PLA	C1-271PA
<b>2-Speed</b>				
P6RA6YF-206L**	Hi Speed 1-1/2    Low Speed 1/4	A100FLL-Y	C105-238PBA	C1-271P1
P6RA6YG-207L*	2                    1/3	AE100GLL-Y	C105-238PDBA	C1-271P1
<b>3-PHASE 60Hz PUMPS</b>				
Model	HP	Motor (Item #1)	Impeller (Item #10)	Diffuser (Item #11)
<b>208-230/460V 1-Speed</b>				
345076	1	354806S	C105-238PBA	C1-271P1
345077	1-1/2	354808S	C105-238PDBA	C1-271P1
345078	2	354810S	C105-238PEBA	C1-271P1
345079	3	354812S	C105-238PLA	C1-271P1
<b>200/400V 1-Speed</b>				
P6R62D3-186	3/4	AP100DH2	C105-238PA	C1-271P1
P6R62E3-187	1	AP100EH2	C105-238PBA	C1-271P1
P6R62F3-188	1-1/2	AP100FH2	C105-238PDBA	C1-271P1
P6R62G3-189	2	AP100GH2	C105-238PDBA	C1-271P1
<b>575V 1-Speed</b>				
P6EA6D36-204*	3/4	16502-0024S	C105-238PX	C1-271P1
P6EA6E36-205*	1	16503-0024S	C105-238P	C1-271P1
P6EA6F36-206	1-1/2	62001-1019S	C105-238PBA	C1-271P1
P6EA6G36-207	2	62003-2087	C105-238PDBA	C1-271P1
P6E6H36-209	3	62001-1021S	C105-238PLA	C1-271PA

(\* ) Note: Uses Impeller Screw (Item #10B) P/N 37337-6080

(\*\*) Note: Uses Impeller Screw (Item #10B) P/N 37337-6081



1620 HAWKINS AVE., SANFORD, NC 27330 • (919) 566-8000  
10951 WEST LOS ANGELES AVE., MOORPARK, CA 93021 • (805) 553-5000

[WWW.PENTAIRPOOL.COM](http://WWW.PENTAIRPOOL.COM)

All Pentair trademarks and logos are owned by Pentair or one of its global affiliates. Pentair Aquatic Systems®, Sta-Rite® and Max-E-Pro® are trademarks and/or registered trademarks of Pentair Water Pool and Spa, Inc. and/or its affiliated companies in the United States and/or other countries. Unless expressly noted, names and brands of third parties that may be used in this document are not used to indicate an affiliation or endorsement between the owners of these names and brands and Pentair Water Pool and Spa, Inc. Those names and brands may be the trademarks or registered trademarks of those third parties. Because we are continuously improving our products and services, Pentair reserves the right to change specifications without prior notice. Pentair is an equal opportunity employer.

© 2017 Pentair Water Pool and Spa, Inc. All rights reserved. This document is subject to change without notice.



P/N S691 REV. E 6/7/17